


- Modern style
- Structural, Load-Bearing
- Cap, Base & Installation Kit included

## Easy 3 Step Installation:

- 1. Measure & Cut to length
- 2. Attach Mounting Plates & Slide C&B into Position
- 3. Clean, Prime then Paint

	Nominal Width	Available Heights				Load
		8'	9'	10'	12'	Capacity
	8"	<b>~</b>	<b>~</b>	<b>~</b>	<b>~</b>	5,000

Patent Pending
©2024 Turncraft, All Rights Reserved

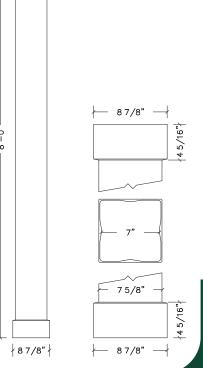

∤87/8"∤